WiFi Din Rail Switch (Smart Life APP)

Operating Manual

Download APP

1

Main Function

Remote control	Voice control
Timing	Countdown
Loop timing	Real-time monitoring of electricity consumption

2

Main Data Parameter

Protocol: **WiFi (Default)**

Rated operating voltage range: **90-300V**

Control Type: **Remote control, Manual**

Poles description: **1P+N (N Pole Pass-through)**

Customization: **SigMesh/ZigBee**

Model selection: **Non-metering Type / Metering Type**

3

Non-metering Type
LED Indicator Description

The LED indicator show a steady blue light to indicate that the switch in ON status.

The LED indicator show a light out to indicate that the switch in OFF status.

The LED indicator show blue flashing to indicate that switch in paring model.

Metering Type
LED Indicator Description

The LED indicator shows a steady blue light to indicate that the network connection is successful.

The LED indicator shows blue flashing slowly, indicating that the product in pairing model.

The LED indicator shows a light out, indicating that the device is off-grid model.

The Button indicator shows a light up to indicate that the switch is OFF.

The Button indicator shows a light out to indicate that the switch is ON.

Live View

Can monitor the current, voltage, and power of the load equ-ipment in real time, and can also record the power consumption of the year, month, day, hour, and different time neriods, helping users to check the power consumption of load equipment more clearly. Setting the switch status of the equipment in different scenarios, and remotely monitor the real-time situation of the load electrical appliances.

⚡ total electricity consumption **5.00** kWh

Month **Day** **Year**

5.00 kWh
total electricity consumption

13:00 13:00
5.00 kWh

1:00   13:00   24:00

◀   03/19   ▶

Real-time monitoring electricity consumption.

NPole   LPole

Configuration Steps

First Step:

To connect the wire from the up -per of the WiFi Din Rail Switch, the live wire connect to the L pole, and the neutral wire conn -ect to the N pole, please make sure that the wiring is correct and strong WiFi signal.

8

Configuration Steps

Second Step:

Turn on the Bluetooth and WiFi of the mobile phone, open the APP, and then long press the "power" button, wait for about 5-10 seconds, the LED indicator will flash blue light slowly.
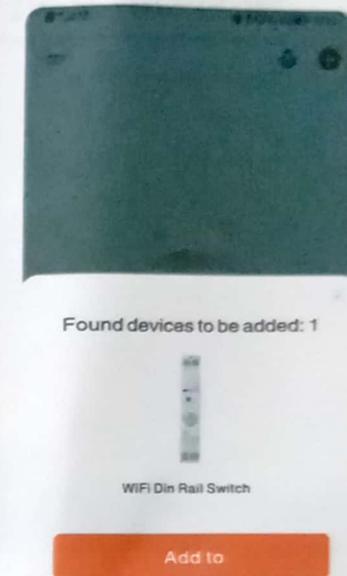
Log in

Register

Long press 5-10s
Configuration

9

Configuration Steps

Third Step:

Waiting for a while after graph -ics is displayed the APP, or click the "+" in the upper right corner, then choose the "Add Device" button to wait discov -ering devices, then click "Add" button.

Found devices to be added: 1

WiFi Din Rail Switch

Add to

10

Configuration Steps

Fourth Step:

Enter the wifi account passwo -rd and click next step, wait for the switch to connect the network.
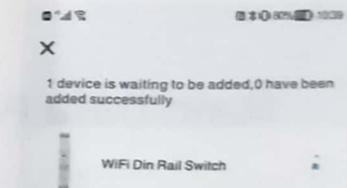
Cancel

Select device working Wi-Fi and enter password

📶 ELE

🔒 ● ● ● ● ● ●

Next step

11

Configuration Steps

Fifth Step:

The switch is connected to the network.

✕

1 device is waiting to be added,0 have been added successfully

WiFi Din Rail Switch
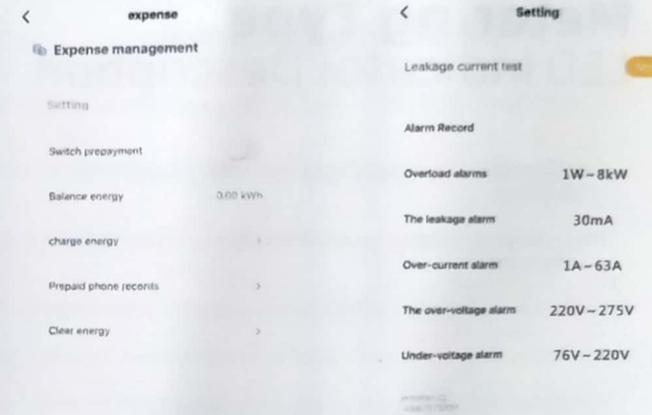
12

Configuration Steps

Sixth Step :

After the successful connection, the LED indicator will be chang-ed from blue slow flashing to blue steady light.
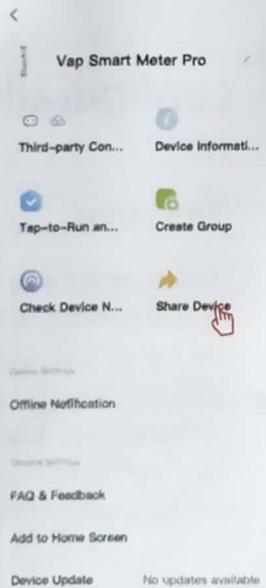
13 —————— Setting Function

Overload alarms	1W~8kW
The leakage alarm	30mA
Over-current alarm	1A~63A
The over-voltage alarm	220V~275V
Under-voltage alarm	76V~220V

14

Decice Sharing

First Step :

15

Decice Sharing

Second Step:

Click on "share with the Account Smart Life" to type the account you want to share.